

## **Ring Count Default Setting Supplement**

Document #52657 Rev. A 07/15/05 ECN 05-429

### **Reference the Following Programming Addresses in the Manual**

- **Ring Count on Primary Phone Line (Addresses 104-105)**
- **Ring Count on Secondary Phone Line (Addresses 123-124)**

The Ring Count default value for both Primary and Secondary phone lines has been changed to **00** which prevents the panel from answering incoming phone calls. This new default setting will disable Upload/Download capability via the programming application. This will require the installer/programmer to manually program addresses 104-105 and 123-124 to enable the Upload/Download feature.

The corresponding sections in the manual have been revised as described below:

#### **Ring Count on Primary Phone Line (104-105)**

Use this address to designate the number of rings allowed on the primary phone line prior to answering an incoming call from a Service Terminal. Factory default is '00' which prevents the panel from answering incoming calls. This entry may be programmed with 01 rings up to a maximum of 25 rings.

#### **Ring Count on Secondary Phone Line (123-124)**

Use this address to designate the number of rings allowed on the secondary phone line prior to answering an incoming call from a Service Terminal. Factory default is '00' which prevents the panel from answering incoming calls. This entry may be programmed with 01 rings up to a maximum of 25 rings.