




## SCSS-700ANN Remote Annunciator Installation

The optional Model SCSS-700ANN red remote annunciator, shown in Figure 1, performs the same functions as the on-board annunciator. Operation is identical. The SCSS-700ANN can be surface or flush mounted.

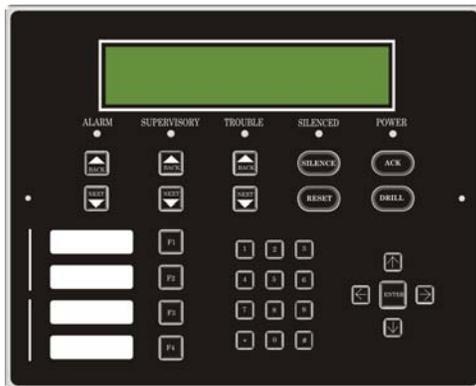


**Figure 1: SCSS-700ANN Remote Annunciator**

SCSS-700ANN installation involves the following steps:

1. Make sure power is off at the panel.
2. Mount the SCSS-700ANN in the desired location (see Section "Mounting the SCSS-700ANN").
3. Connect the SCSS-700ANN to the panel (see Figure 2).
4. Use the dipswitches on the back of the SCSS-700ANN to assign an ID# to the SCSS-700ANN (see Section 4.10.1 of Manual P/N 53722).
5. The SCSS-700ANN module must be added to the system through programming. JumpStart Auto Programming will add the module automatically (refer to Manual P/N 53722).

### Wiring Connections

Wire the SCSS-700ANN to the FACP as Shown in Figure 2.

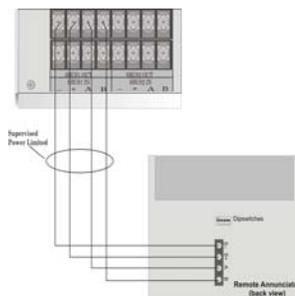

**Figure 2: SBUS Connections**

## Specifications

Parameter	Value
Operating Voltage:	24 VDC
Current	Standby: 25 mA
	Alarm: 50 mA
Operating Temperature:	0° to 49° C (32° to 120° F)
Dimensions:	Flush Mount: Overall: 12-1/4" W x 11.5" H x 7/8" D 31.1 cm W x 29.2 cm H x 2.2 cm D See "Flush Mounting" for back box dimensions.
	Surface Mount: Including trim ring: 12-1/4" W x 11.5" H x 3" D 31.1 cm W x 29.2 cm H x 7.6 cm D

### Mounting the SCSS-700ANN


This section of the manual describes mounting the remote annunciator. The annunciator can be flush- or surface-mounted.

#### Flush Mounting

This section of the manual describes flush mounting.

Follow these steps to flush mount the SCSS-700ANN


1. The back box dimensions are 9-3/8" w x 8-3/8" h. The minimum depth 2". The back box can be mounted prior to the complete installation of the SCSS-700ANN using any of the mounting holes shown in Figure 3.

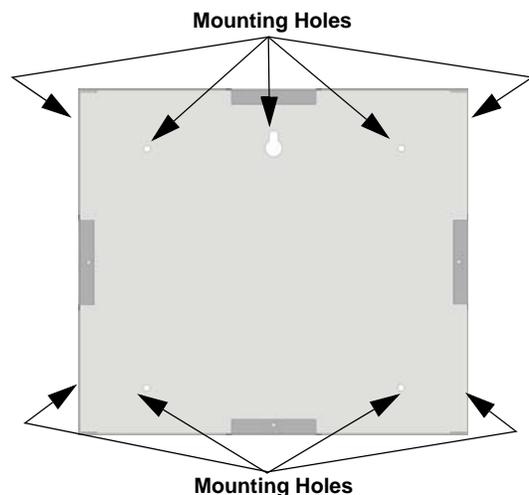

**Figure 3: Back Box Mounting Holes**


2. Remove knockout holes as needed for wires. See Figure 4

for backbox knockout locations

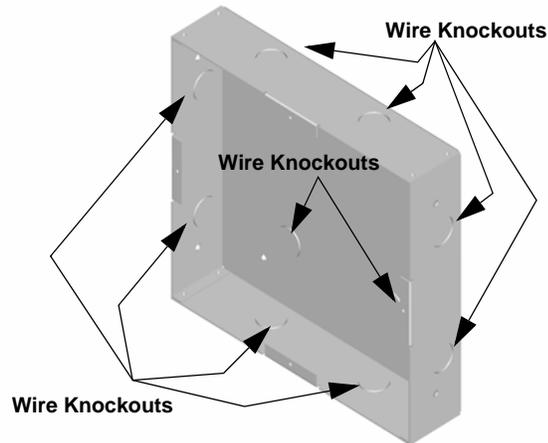

**Figure 4: Back Box Knockout Locations**

3. Wire the Annunciator board to the main control panel. See Figure 2.
4. Attach the annunciator and door assembly to back box as shown in Figure 5 using the supplied screws.

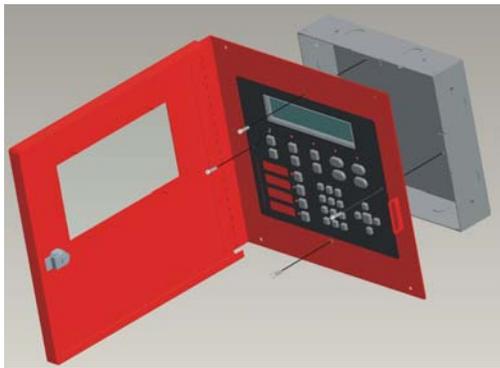


**Figure 5: Attaching Annunciator/Door Assembly to Backbox**

## Surface Mounting

The Model RA-2000TR red trim ring is available for use when surface mounting.


1. Remove the desired knock out. See Figure 4.
2. To properly mount the back box, insert a single screw into the key shaped mounting hole. Do not tighten all the way. See Figure 6.  
Place a level on top of the back box, with the back

box level insert the rest of the mounting screws.

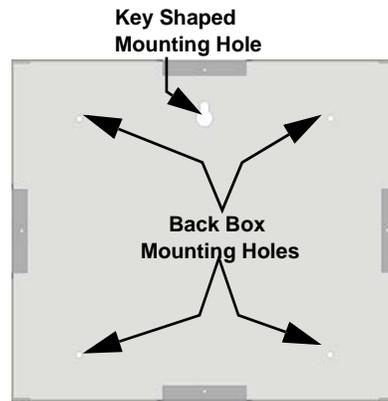

**Figure 6: Back Box Surface Mount Holes**

3. Run wires to the control panel.
4. Place the trim ring over the back box as shown in Figure 7.

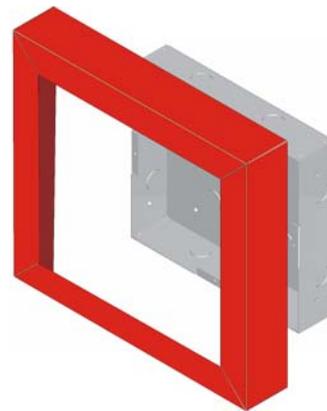

**Figure 7: Installing Trim Ring**

5. Attach the Door assembly to the back box using screws provided.
6. After the annunciator wiring to the panel has been completed, replace the electronic assembly in the back box. Place the bezel over the back box and tighten the set screws on the bezel.

